

# HANDHELD REMOTE



## SYSTEM CONTROLS

### CLASSROOM TV/MONITOR CONTROLS

- **POWER** Toggles power on and off.
- **+ VOL -** Controls sound volume.
- **MUTE** Toggles audio on and off.
- **LOCAL** Toggles between system and local video inputs (if available). Used to display contents of computer monitor on television screen.

### CLASSROOM CONTROL MODULE (CCM)

#### Viewing Menu(s)

- Press MENU then the number (0-9) of the desired menu. When the Scheduled Resources menu is selected, that room's schedule displays for a programmed length of time.

**Pressing MENU-MENU will toggle between all available menus.**

#### Selecting a Resource

- **Global Resource:** Press GLOBAL then the number (0-99) of the desired global resource. View the Global Resources menu to see global resource numbers.

- **Auxiliary Resource:** Press AUX then the number (0-99) of the desired auxiliary source. View the Auxiliary Resources menu to see auxiliary resource numbers.

**Global and Auxiliary Resource control is available on a first-come, first-served basis.**

- **Scheduled Resource:** Press the letter (A-H) assigned to the desired source. View the Scheduled Resources menu to see scheduled resource letters.

#### Displaying the Time

- To display the time of day on the CCM, press FUNC, then DISPLAY.

### DVD PLAYER CONTROL

- **FUNC-POWER** Turns on DVD player.
- **PLAY** Starts disc play.
- **STOP** Stops disc play. Press once to pause disc on blue screen, then PLAY to return to same point on disc. Press STOP twice followed by PLAY to return to beginning of disc.
- **PAUSE** Pauses disc in place. Press PLAY to resume play.
- **SEARCH, 0, or 1** Displays disc menu (key used depends on DVD used).
- **2, 4, 6, 8** Moves onscreen cursor to highlight a selection.
- **ENTR** Selects highlighted option.
- **DISPLAY** Displays disc information. With 5-disc changers will sometimes display tray number.
- **FUNC-FFWD** Advances through DVDs in

### DIGITAL VIDEO PLAYER

#### Menu Mode

- **2 or REW** Scrolls up title menu.
- **8 or FFWD** Scrolls down title menu.
- **PLAY** Starts play/enters menu.
- **FUNC PLAY** Starts continuous loop play.

#### Play Mode

- **PLAY** Starts play.
- **STOP** Stops play.
- **PAUSE** Pauses in place. Press again to resume play.
- **FFWD** Scans forward.
- **REW** Scans in reverse.
- **ENTR** Adds bookmark.
- **CLR/CLEAR** Clears bookmark.
- **STEP** Freezes image and advances one frame at a time.
- **FUNC STEP** Advances or reverses to next bookmark.
- **DISPLAY** Toggles display of information.
- **SEARCH** Enters search mode.

## SOURCE CONTROLS

### VCR FUNCTIONS

- **PLAY** Starts tape play.
- **STOP** Stops tape play.
- **REW** Rewinds the tape (or scans in reverse while in play mode).
- **FFWD** Fast forwards the tape (or scans forward while in play mode).
- **PAUSE** Pauses tape play.
- **STEP** Advances tape one frame at a time in pause mode (on some VCRs).
- **DISPLAY** Toggles display of onscreen information. Use this feature to display the counter/timer to cue a tape.
- **CLR/CLEAR** Resets the counter/timer to zero.

## LASERDISC PLAYER FUNCTIONS

- **PLAY** Starts disc play.
- **STOP** Stops disc play and returns to beginning of disc.
- **PAUSE** Pauses disc in place. Press PLAY to resume.
- **FFWD** Scans forward while in play or pause mode.
- **REW** Scans in reverse while in play or pause mode.
- **STEP** Freezes image and advances or reverses one frame at a time.
- **DISPLAY** Toggles display of onscreen information.
- **SEARCH** Toggles between chapter and frame mode.
- **AUDIO** Toggles between available audio channels. Use I/L for most discs.
- **Search Frame or Chapter:**
  - **PIONEER Models**—Press SEARCH to toggle between frame and chapter modes. Enter frame or chapter number. Press ENTR, then PLAY.
  - **SONY Models**—For frame search press SEARCH and enter frame number. Press ENTR, then PLAY. For chapter search press CLR/CLEAR, enter chapter number, then press PLAY.
- **Switch Side A/B:**
  - **PIONEER Models**—Press FUNC, then STOP to play side A. Press FUNC, then PAUSE to play side B.
  - **SONY Models**—Press FUNC, then PAUSE to change the side of the disc being played.
- **Barcode Wand:**
  - **PIONEER Models**—Press READ on the wand and pass it over the desired barcode. Wand beeps on successful read. Point wand at CCM and press SEND. CCM POWER LED blinks and wand beeps to indicate barcode command accepted.
  - **SONY Models**—Press READ on the wand and pass it over the desired barcode. Wand beeps on successful read. Point wand at CCM and press SEND. CCM POWER LED blinks to indicate barcode command acceptance.

## TIMER FUNCTIONS

- **Using the CCM as a Count-Down Timer\***
  - Press FUNC, then AUX.
  - CCM display\* should read 000:00.
- **+ CH -** Increases or decreases minutes.
- **+ VOL -** Increases or decreases seconds.
- **FFWD** Adds 20 minutes.
- **REW** Removes 20 minutes.
- **PLAY** Starts countdown.
- **STOP** Stops countdown.
- **CLR/CLEAR** Resets display to 000:00. Time can be added or removed at any time, and the counter can be restarted by pressing PLAY.

### Using the CCM as a Count-Up Timer\*

- Press FUNC, then ENTR.
  - CCM display\* should read 000:00.
  - **PLAY** Starts the counter.
  - **STOP** Stops the counter.
  - **CLR/CLEAR** Resets display to 000:00. Always hit STOP to stop the counter before hitting CLR-CLEAR to reset to zero.
- Press MENU to exit either counter mode.
- \* On some television models the counter will appear on the television screen. A solid background may enhance the visibility of the counter on the television screen.

**Note:** All source types may not be available on your system, and source devices other than those listed here may be present.



Visit the Smart School Zone website for SmartSystem® ideas, troubleshooting tips, and MORE!

[www.soundeng.com/schools](http://www.soundeng.com/schools)

# SmartSystem®

Handheld Remote  
Quick Reference Guide



**SOUND**  
ENGINEERING  
1-800-686-8000